


RSG 345, 352


СБОРОЧНЫЕ ЕДИНИЦЫ И ДЕТАЛИ

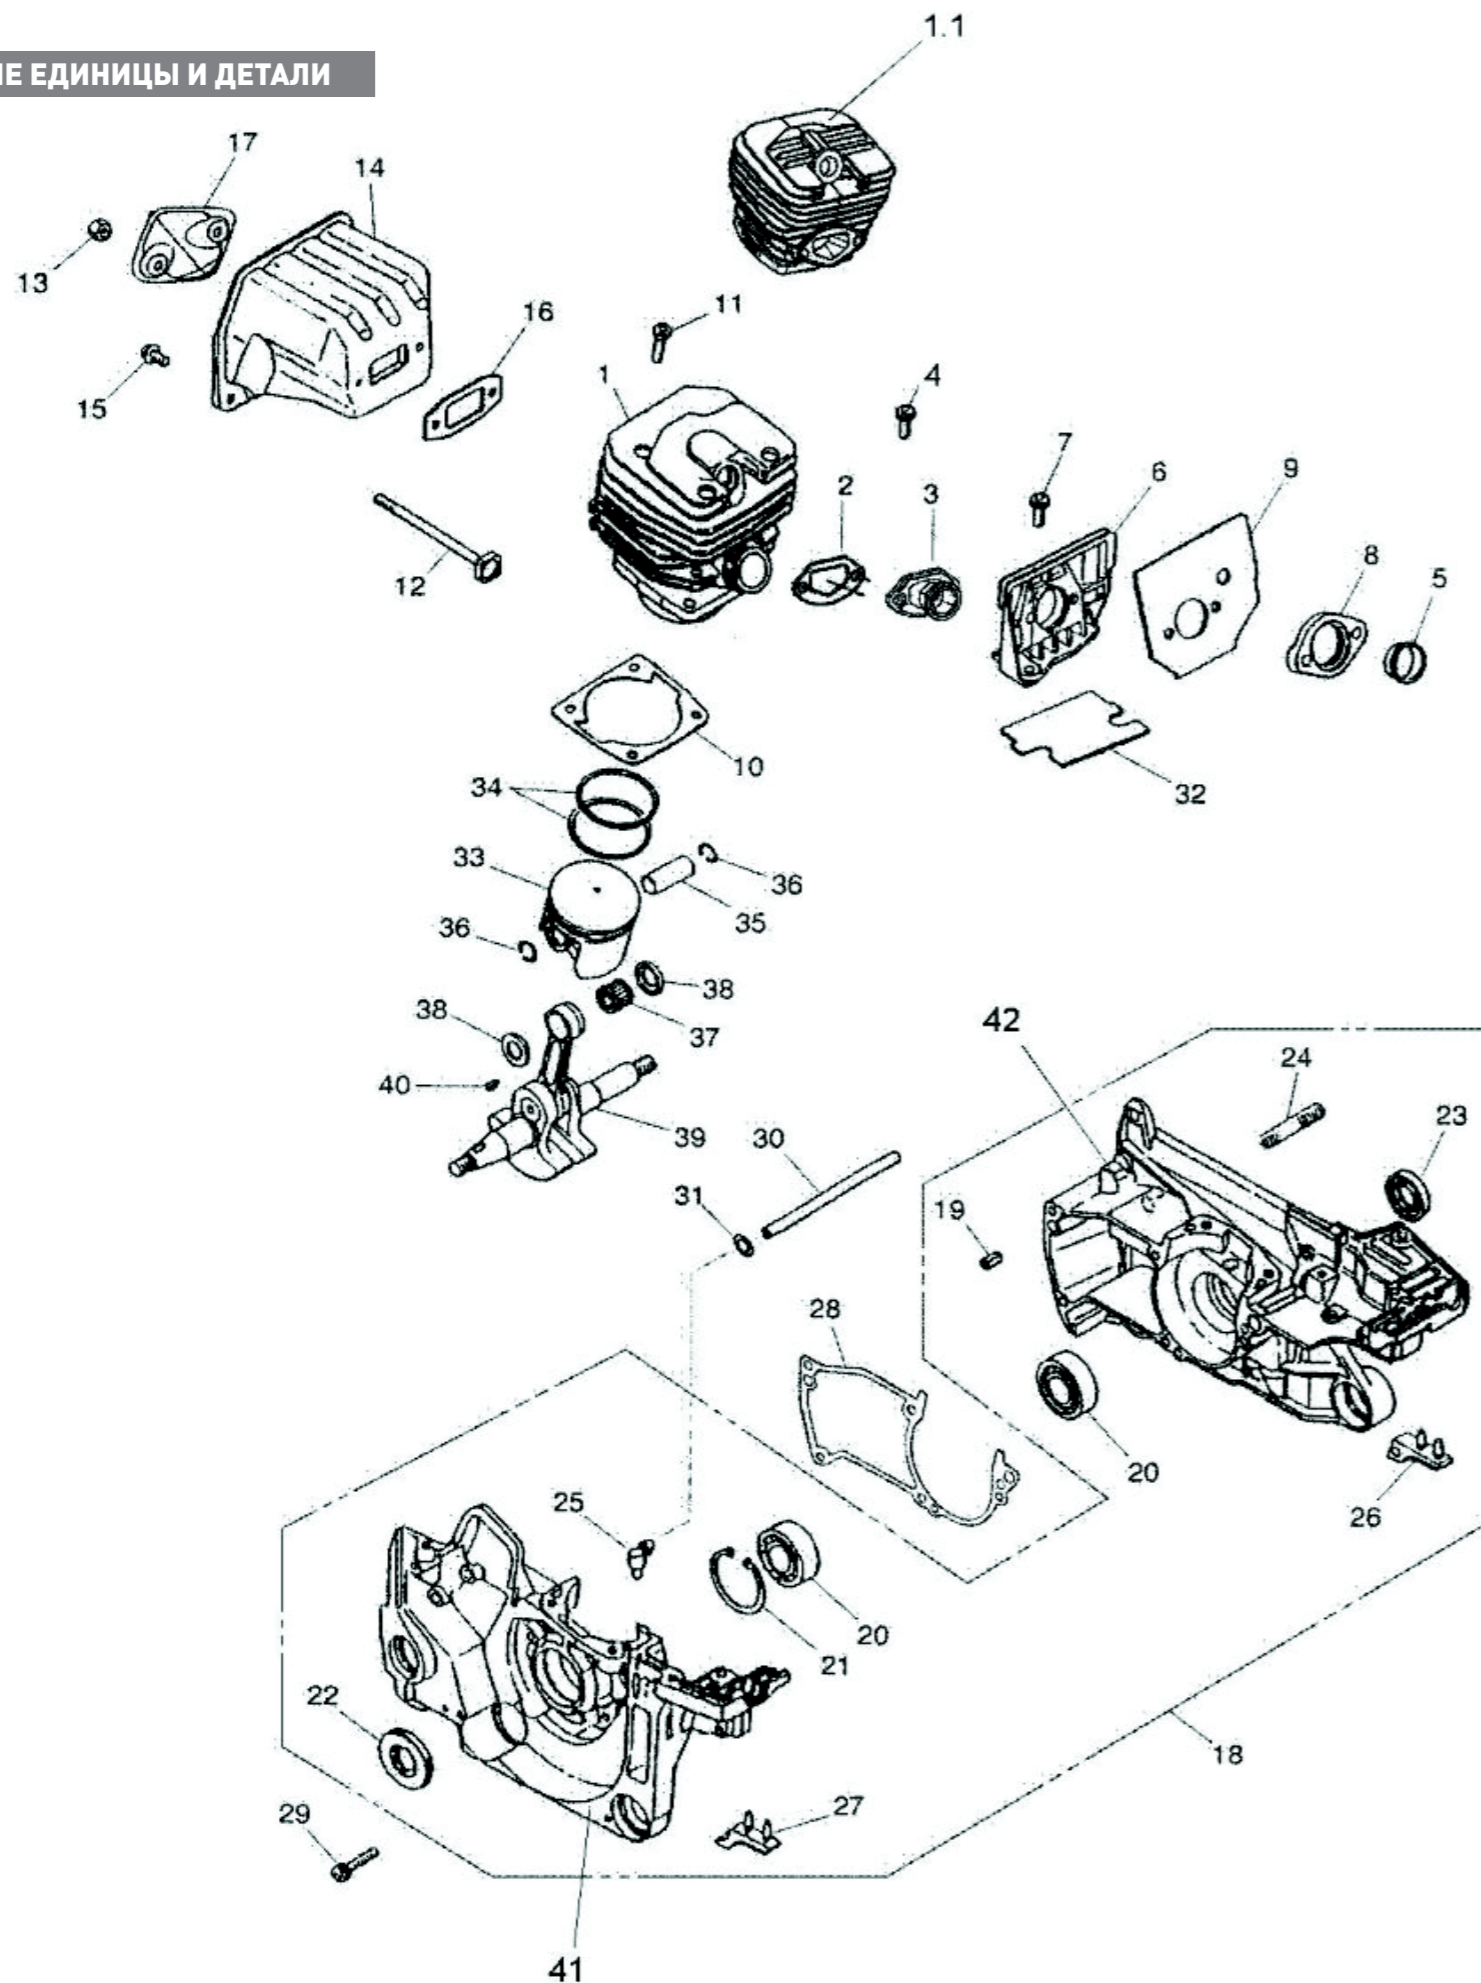

ПЕРЕЧЕНЬ ДЕТАЛЕЙ

№	Артикул	Наименование
1	02.01.0120	Cylinder
	02.01.0110	Cylinder
1.1	02.01.0130	Cylinder
2	07.01.0290	Gasket,intake
3	03.01.0010	Inlet Pipe
4	01.01.0970	Screw M5*14
5	05.02.0130	Inner Guide
6	04.01.0400	Bracket
7	01.01.0501	Screw M5*14
8	04.01.0410	Spacer
9	07.01.0280	Gasket
10	07.01.0300	Gasket, Cylinder
11	01.01.0522	Screw M5*20
12	01.01.0300	Bolt, Muffler M5*84
13	01.02.0021	Nut, Muffler M5
14	05.06.0100	Muffler
15	01.01.0491	Screw M5*12
16	04.01.0330	Gasket, Muffler
17	05.02.0160	Cover
18		Crankcase Assembly
19	01.05.0110	Spring Pin 5*8
20	01.06.0040	Bearing 6202/P6
21	01.04.0210	Snap Ring 35
22	03.08.0060	Oil Seal 15*35*4.5
23	03.08.0050	Oil Seal 15*28*4.5
24	01.01.0370	Stud M8*42
25	05.13.0130	Elbow
26	03.01.0120	Stopper
27	03.01.0110	Stopper
28	07.01.0310	Gasket, Case
29	01.01.0541	Screw M5*30
30	03.01.0060	Pipe
31	05.03.0100	Clip
32	04.01.0320	Mat
33	02.08.0080	Piston
	02.08.0070	Piston
	02.08.0090	Piston
34	05.07.0090	Piston Ring
	05.07.0080	Piston Ring
	05.07.0100	Piston Ring
35		Piston Pin
		Piston Pin
		Piston Pin
36		Snap Ring
37	01.06.0090	Needle BearingK111512.5
38	01.07.0180	Washer
39	05.04.0080	Crankshaft Complete
	05.04.0090	Crankshaft Complete
40	01.05.0010	Key 3*10*3.7
41	02.02.0100	Left Crankcase
42	02.02.0105	Left Crankcase

СБОРОЧНЫЕ ЕДИНИЦЫ И ДЕТАЛИ

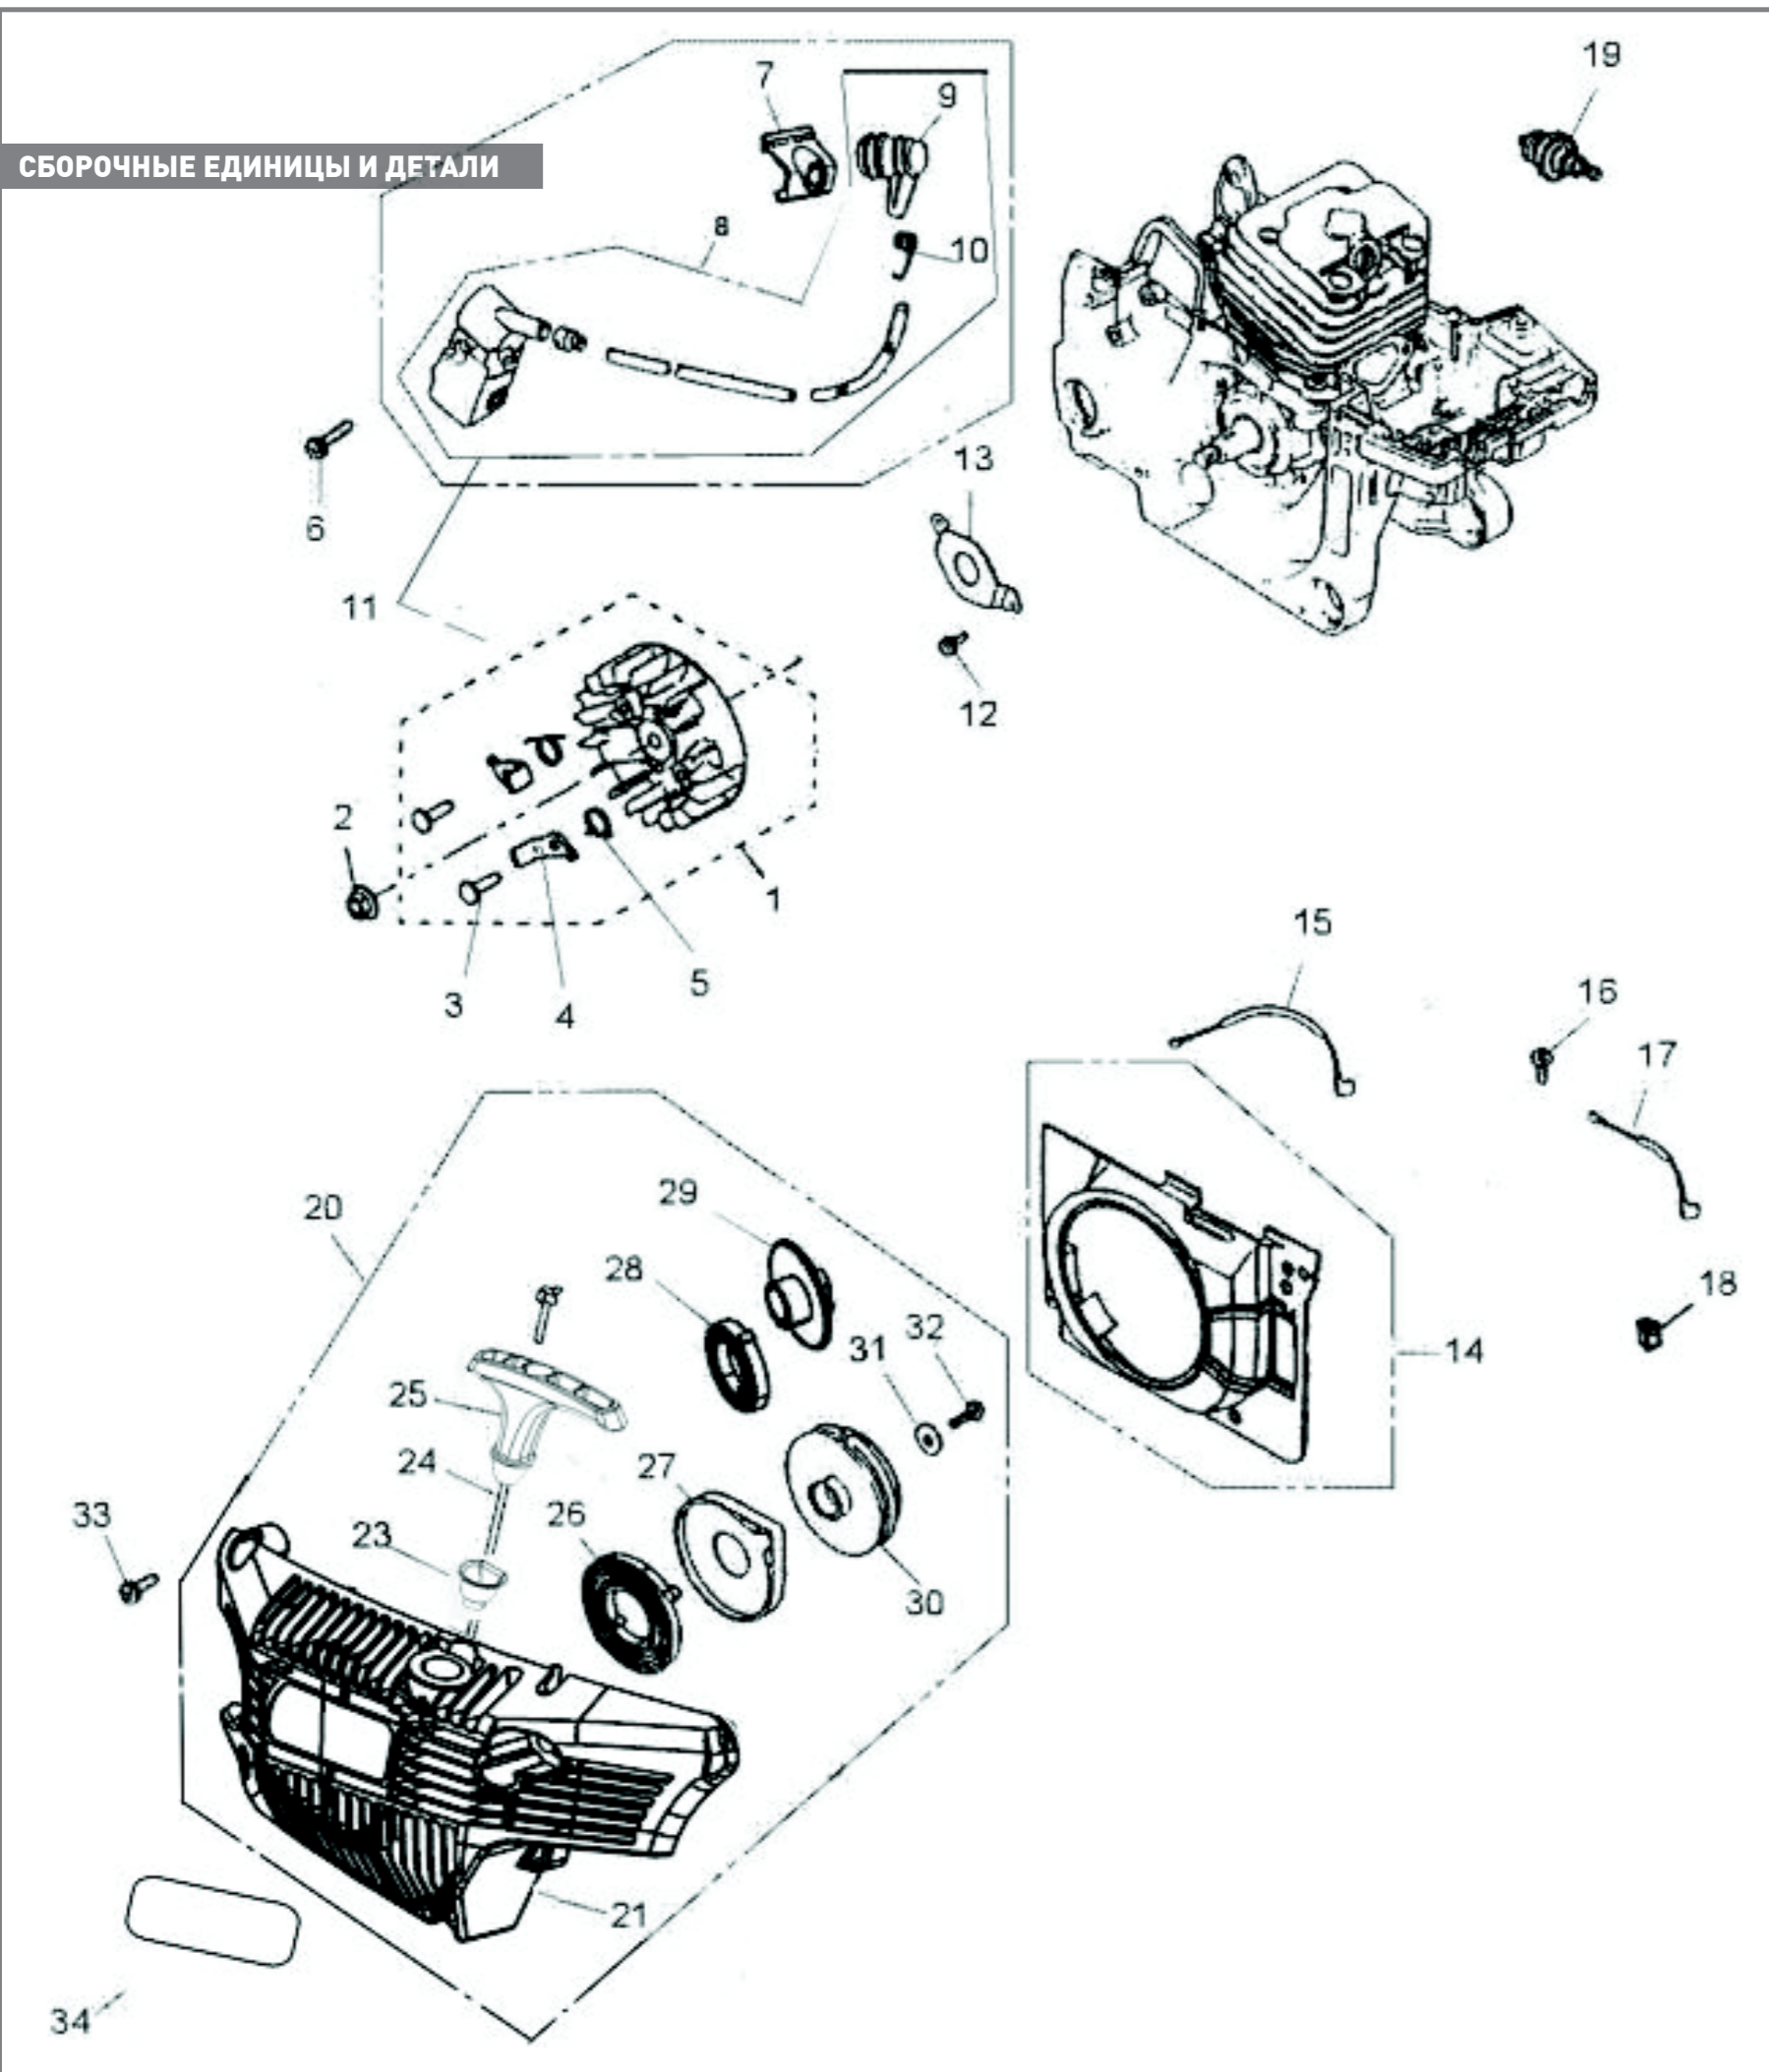



RSG 345, 352

ПЕРЕЧЕНЬ ДЕТАЛЕЙ

№	Артикул	Наименование
1	02.03.0060	Rotor assembly
2	01.02.0131	Nut M8*1
3		Bolt
4		Ratchet
5		Spring
6	01.01.0521	Screw M5*20
7	03.01.0140	Grommet
8	02.03.0150	Coil Complete
9		Plug cap
10		Spring
11		Ignition System
12	01.01.0400	Screw M4*8
13	05.02.0140	Plate
14	04.01.0450	Cover
15	02.03.0170	Cord
16	01.01.0481	Screw M5*10
17	02.03.0171	Cord
18	07.99.0160	Switch
19	05.08.0010	L8RTF
20	04.94.0200	Starter assembly
	04.94.0300	Starter assembly
21	04.01.1230	Recoil case complete
23	05.02.0240	Noose
24	07.99.0190	Rope
25	04.01.1980	Knob
26	05.03.0020	Spring
27	04.01.0590	Spring complete
28	05.03.0130	Spring
29	04.01.2010	Reel
30	04.01.0600	Reel
31	01.04.0061	Washer 5*16*1.5
32	01.03.0150	Screw ST5*16
33	01.01.0750	Screw M5*20
34		Label, Recoil

RSG 345, 352

СБОРОЧНЫЕ ЕДИНИЦЫ И ДЕТАЛИ

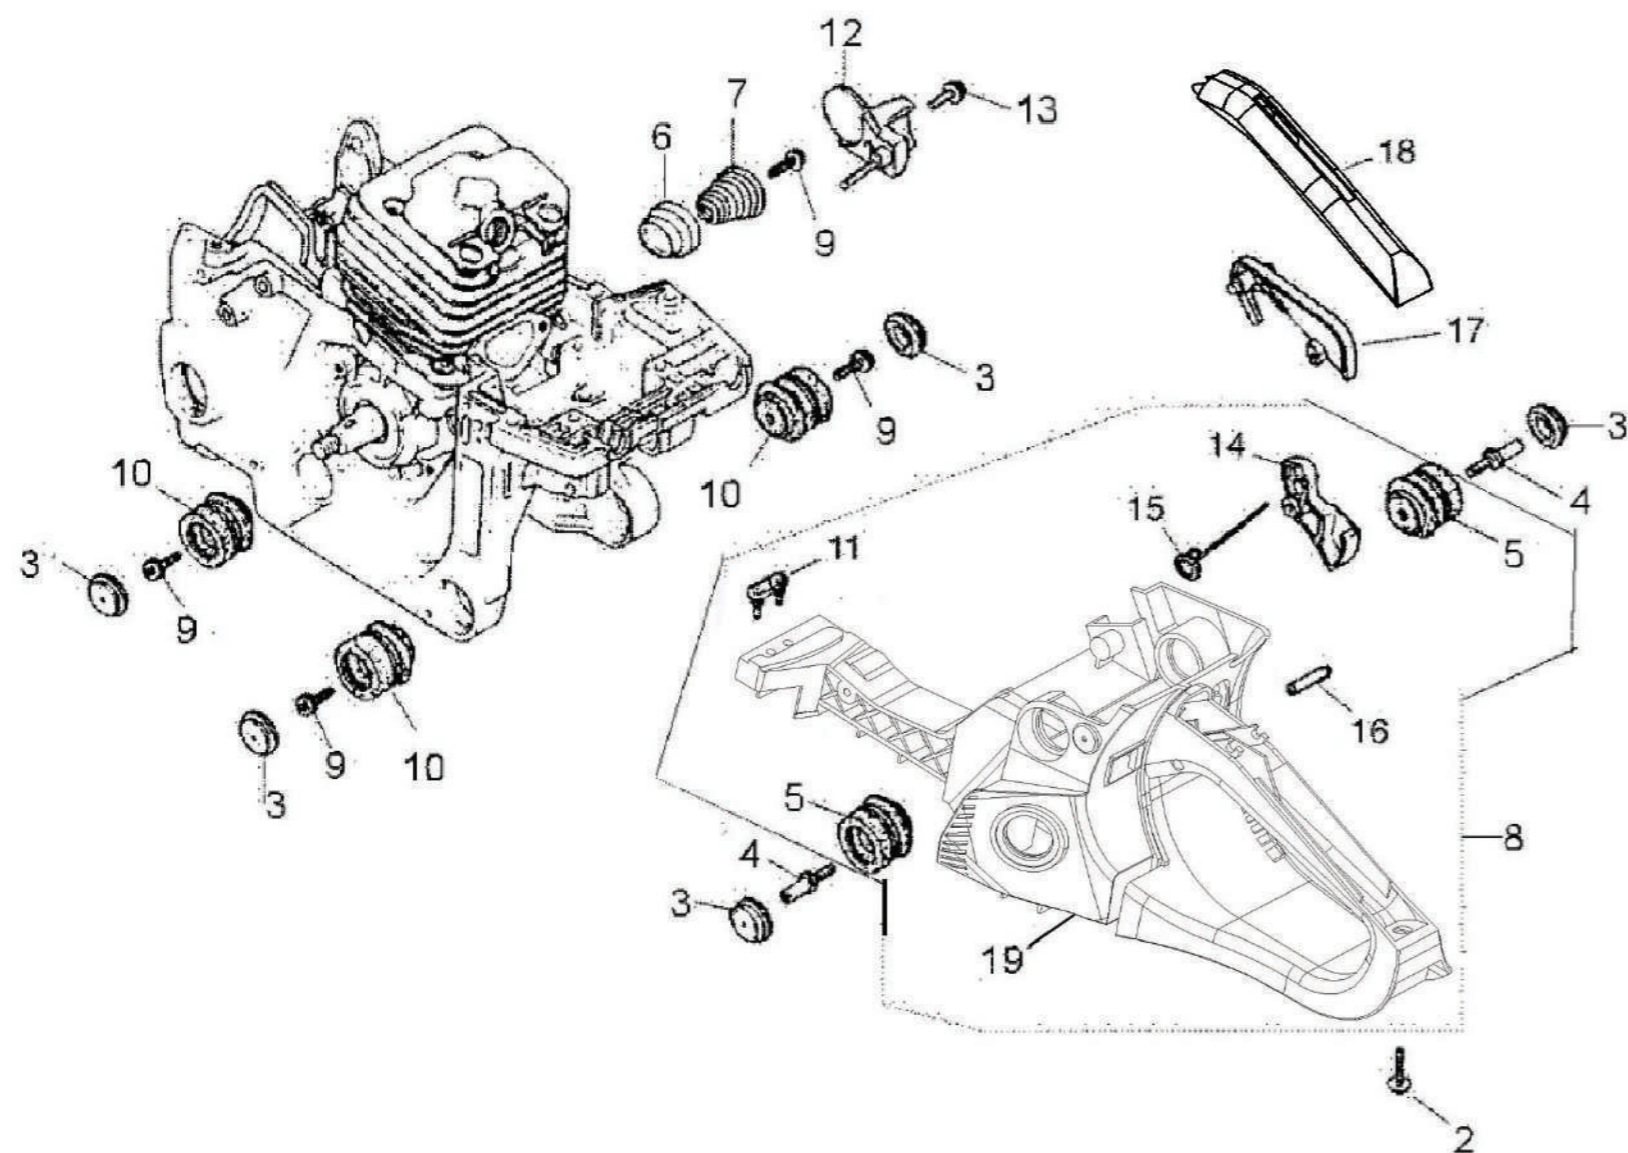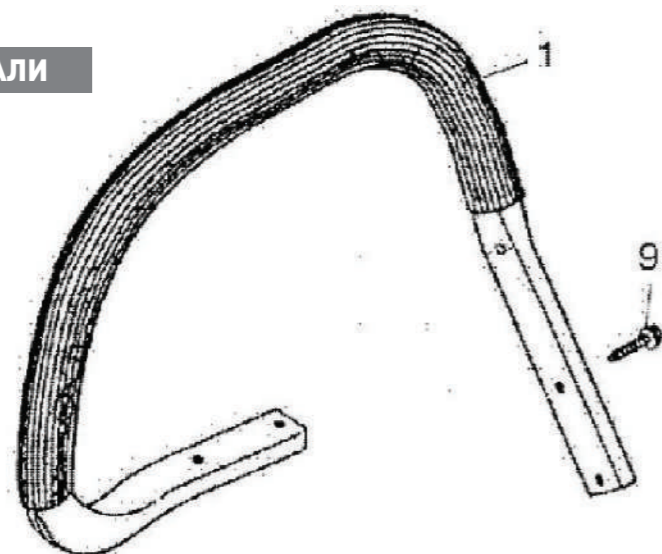


ПЕРЕЧЕНЬ ДЕТАЛЕЙ

№	Артикул	Наименование
1	02.11.0050	handle complete
2	01.03.0140	Screw ST5*16
3	04.01.0300	Cap
4	01.07.0100	Bolt M5*14
5	03.01.0230	Damper
6	04.01.0420	Spacer
7	05.03.0080	Spring
8	04.94.2010	Right handle assembly
9	01.03.0140	Screw ST5*14
10	03.01.0070	Damper
11	03.01.0220	Damper (A)
12	04.01.0440	Chain catcher
13	01.07.0100	Bolt M5*14
14	04.01.0340	Throttle lever
15	05.03.0230	Throttle spring
16	01.05.0160	Spring pin □6*25
17	04.01.0360	Arm
18		Grip cover
19		Right handle

RSG 345, 352

СБОРОЧНЫЕ ЕДИНИЦЫ И ДЕТАЛИ

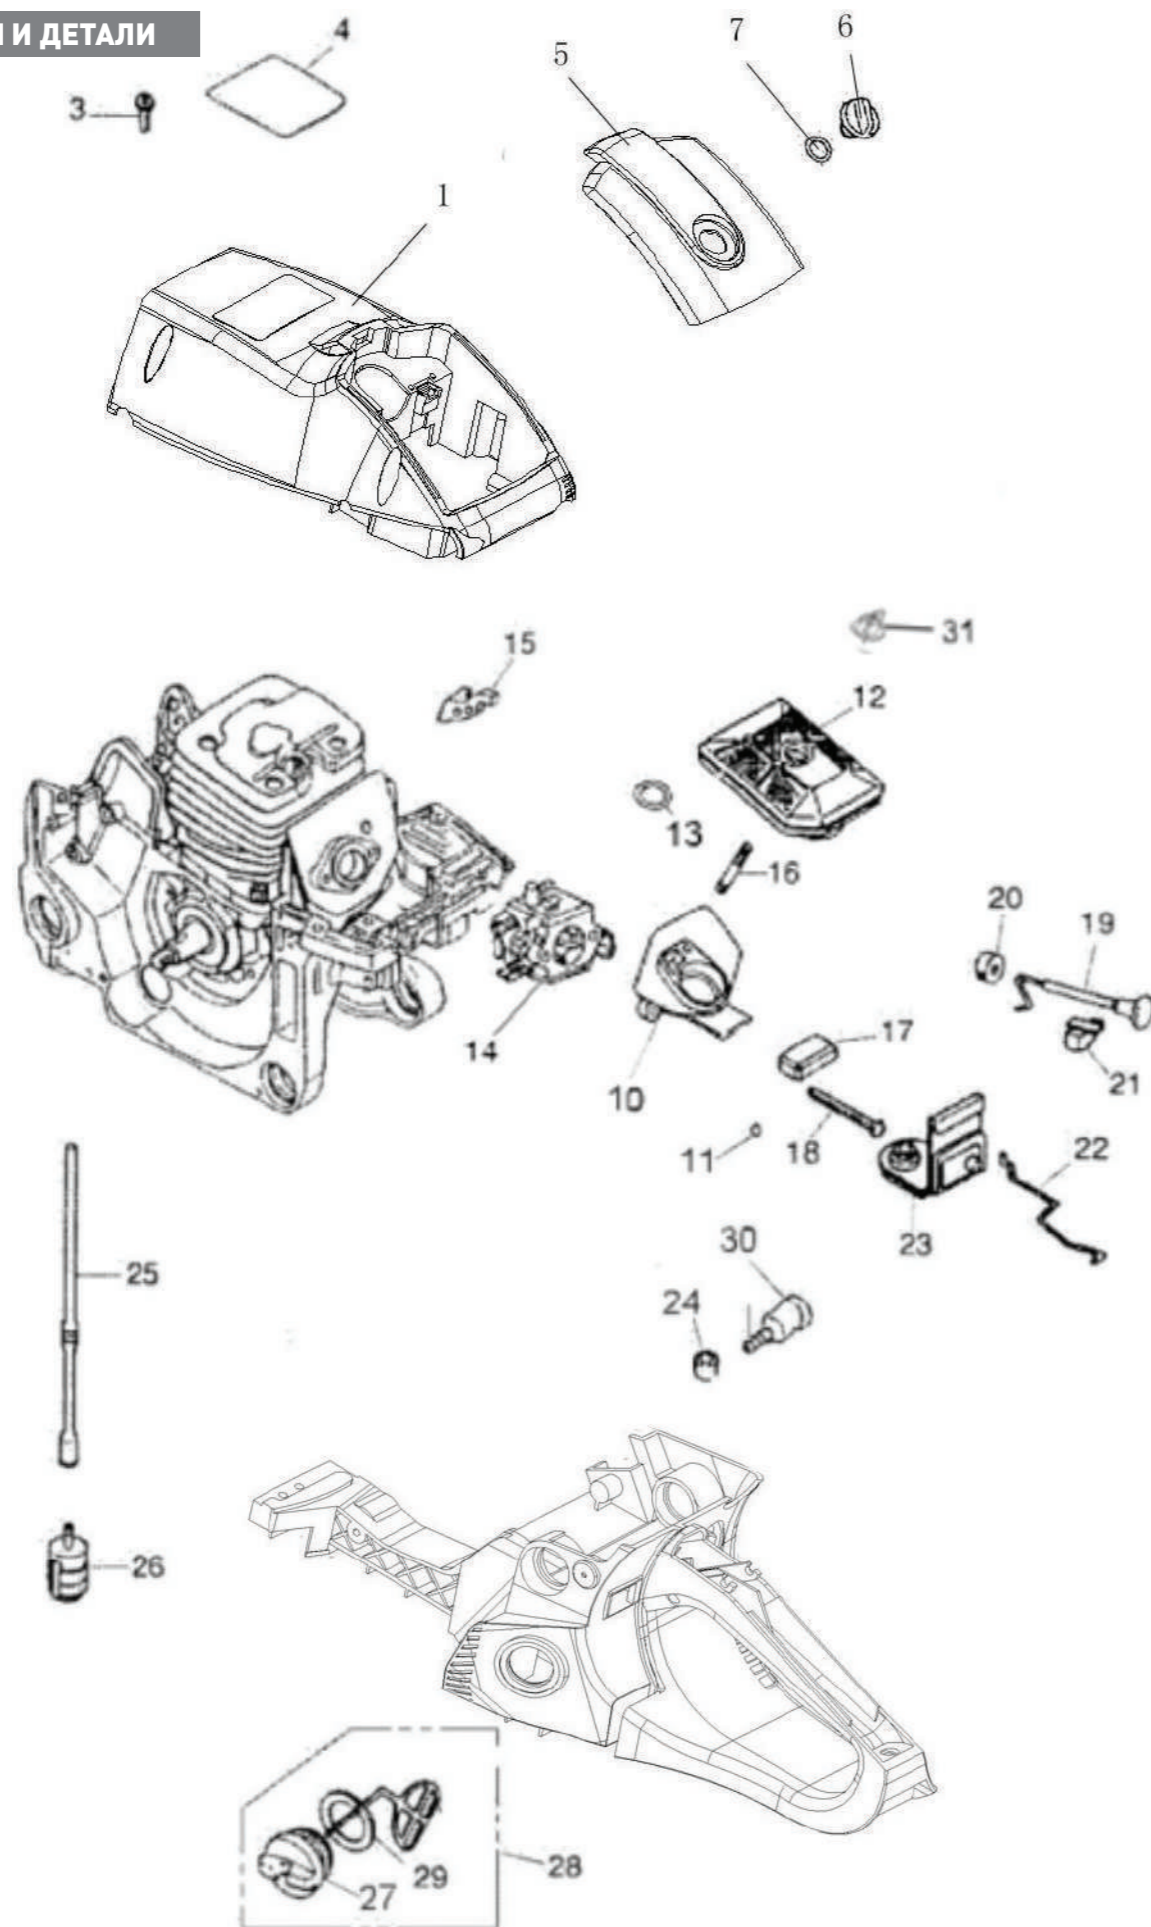


ПЕРЕЧЕНЬ ДЕТАЛЕЙ

№	Артикул	Наименование
1		Cylinder cover
3	01.01.0740	Screw M5*16
4		Label,cover
5		cover
6		Knob
7		Gasket,Knob
10	02.11.0140	Manifold
11	01.04.0160	Spring 5
12	07.99.0070	Air cleaner complete
13	03.01.0030	Sealing ring
14	02.04.0100	Carburetor
	02.04.0170	Carburetor
15	03.01.0090	Guide (HL)
16	01.01.0330	Stud M5*38
17	03.01.0020	Supporter
18	01.01.0580	Screw M5*50
19	04.01.0280	Choke rod
20	03.01.0050	Grommet, Choke
21	03.01.0080	Guide
22	05.03.0150	Throttle rod
23	03.01.0160	Grommet, throttle
24	03.01.0210	Breather Seat
25	03.01.0200	Fuel pipe
26	07.99.0110	Filter assembly
27	04.01.0420	Tank cap
28		Tank cap assembly
29	03.01.0100	Gasket, Tank cap
30	07.99.0150	Breather Assembly

RSG 345, 352

СБОРОЧНЫЕ ЕДИНИЦЫ И ДЕТАЛИ

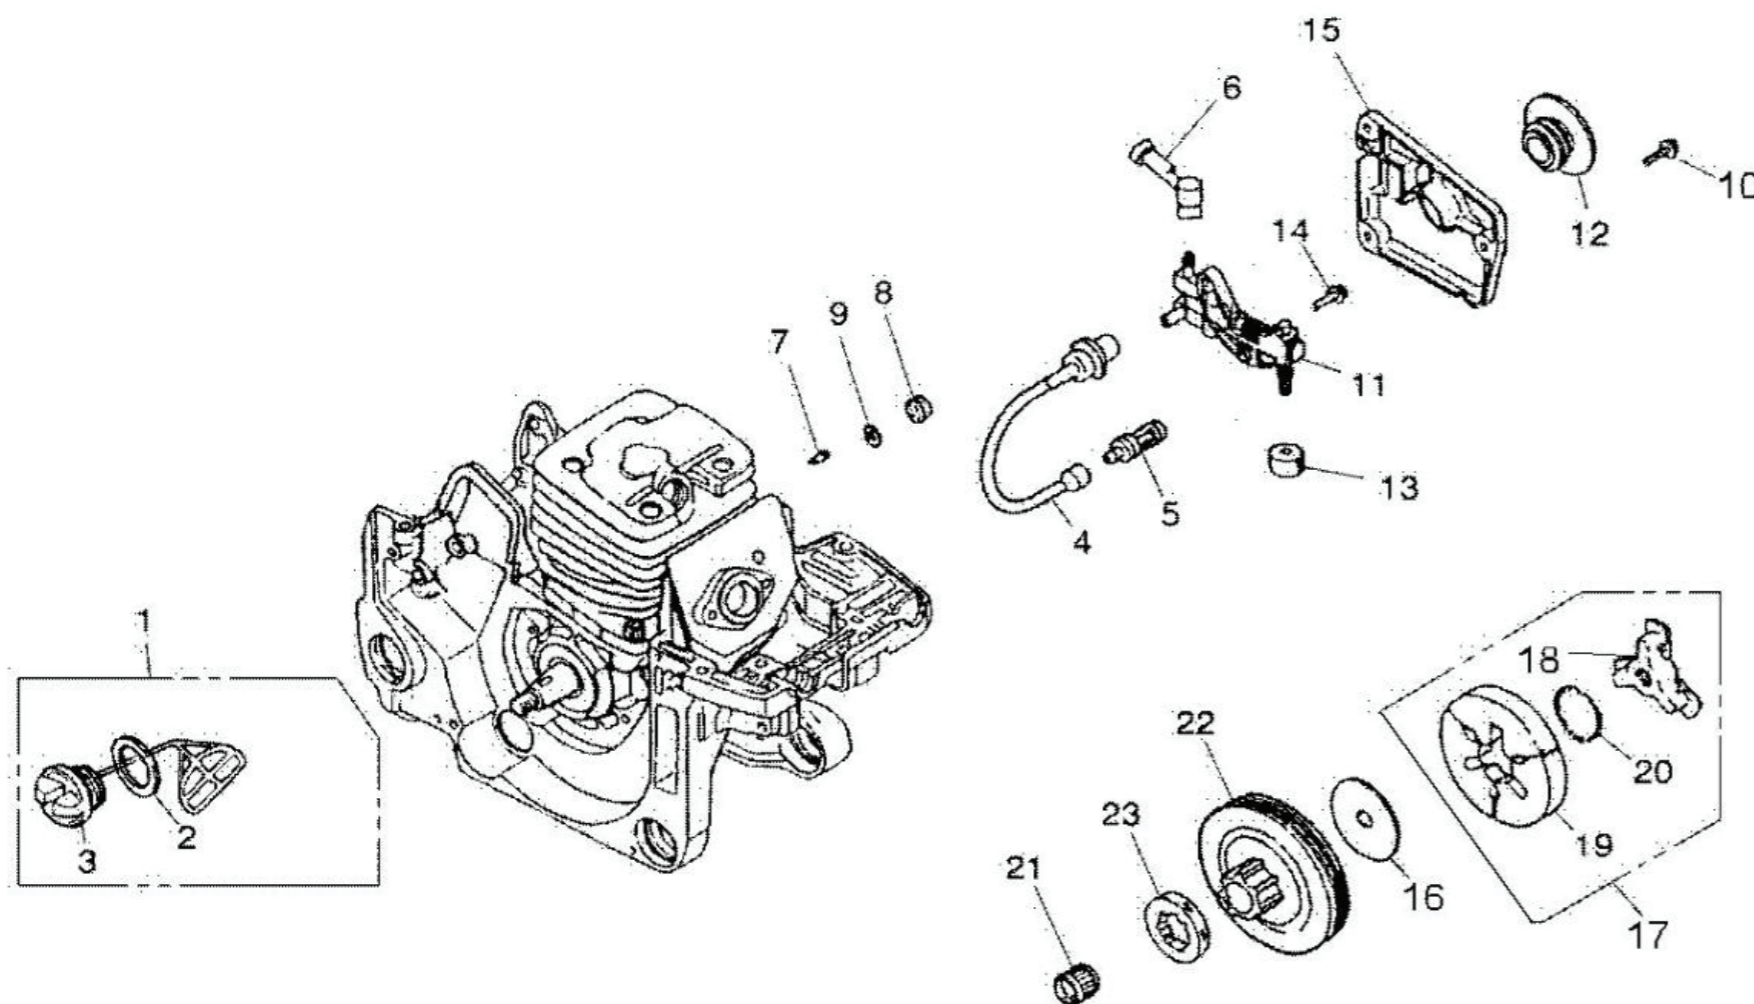


ПЕРЕЧЕНЬ ДЕТАЛЕЙ

№	Артикул	Наименование
1		Oil cap assembly
2	03.01.0100	Gasket, cap
3	04.01.0420	Oil cap
4	03.01.0180	Pipe
5	07.99.0120	Oil filter
6	03.01.0190	Pipe
7	03.01.0130	Valve
8	05.03.0090	Seal
9	07.99.0050	Clip
10	01.01.0430	Screw M4*10
11	02.11.0120	Oil pump
12	04.01.0480	Worm Gear
13	07.99.0040	Seal
14	01.01.0410	Screw M4*14
15	04.01.0490	Pump cover
16	05.02.0150	Plate
17	05.01.0040	Clutch assembly
18		Clutch Support
19		Clutch shoe
20		Spring
21	01.06.0100	Needle bearingK121514.5
22	05.13.0110	Clutch drum
23	05.13.0170	Rim 325P
	05.13.0180	Rim 3/8P

RSG 345, 352

СБОРОЧНЫЕ ЕДИНИЦЫ И ДЕТАЛИ

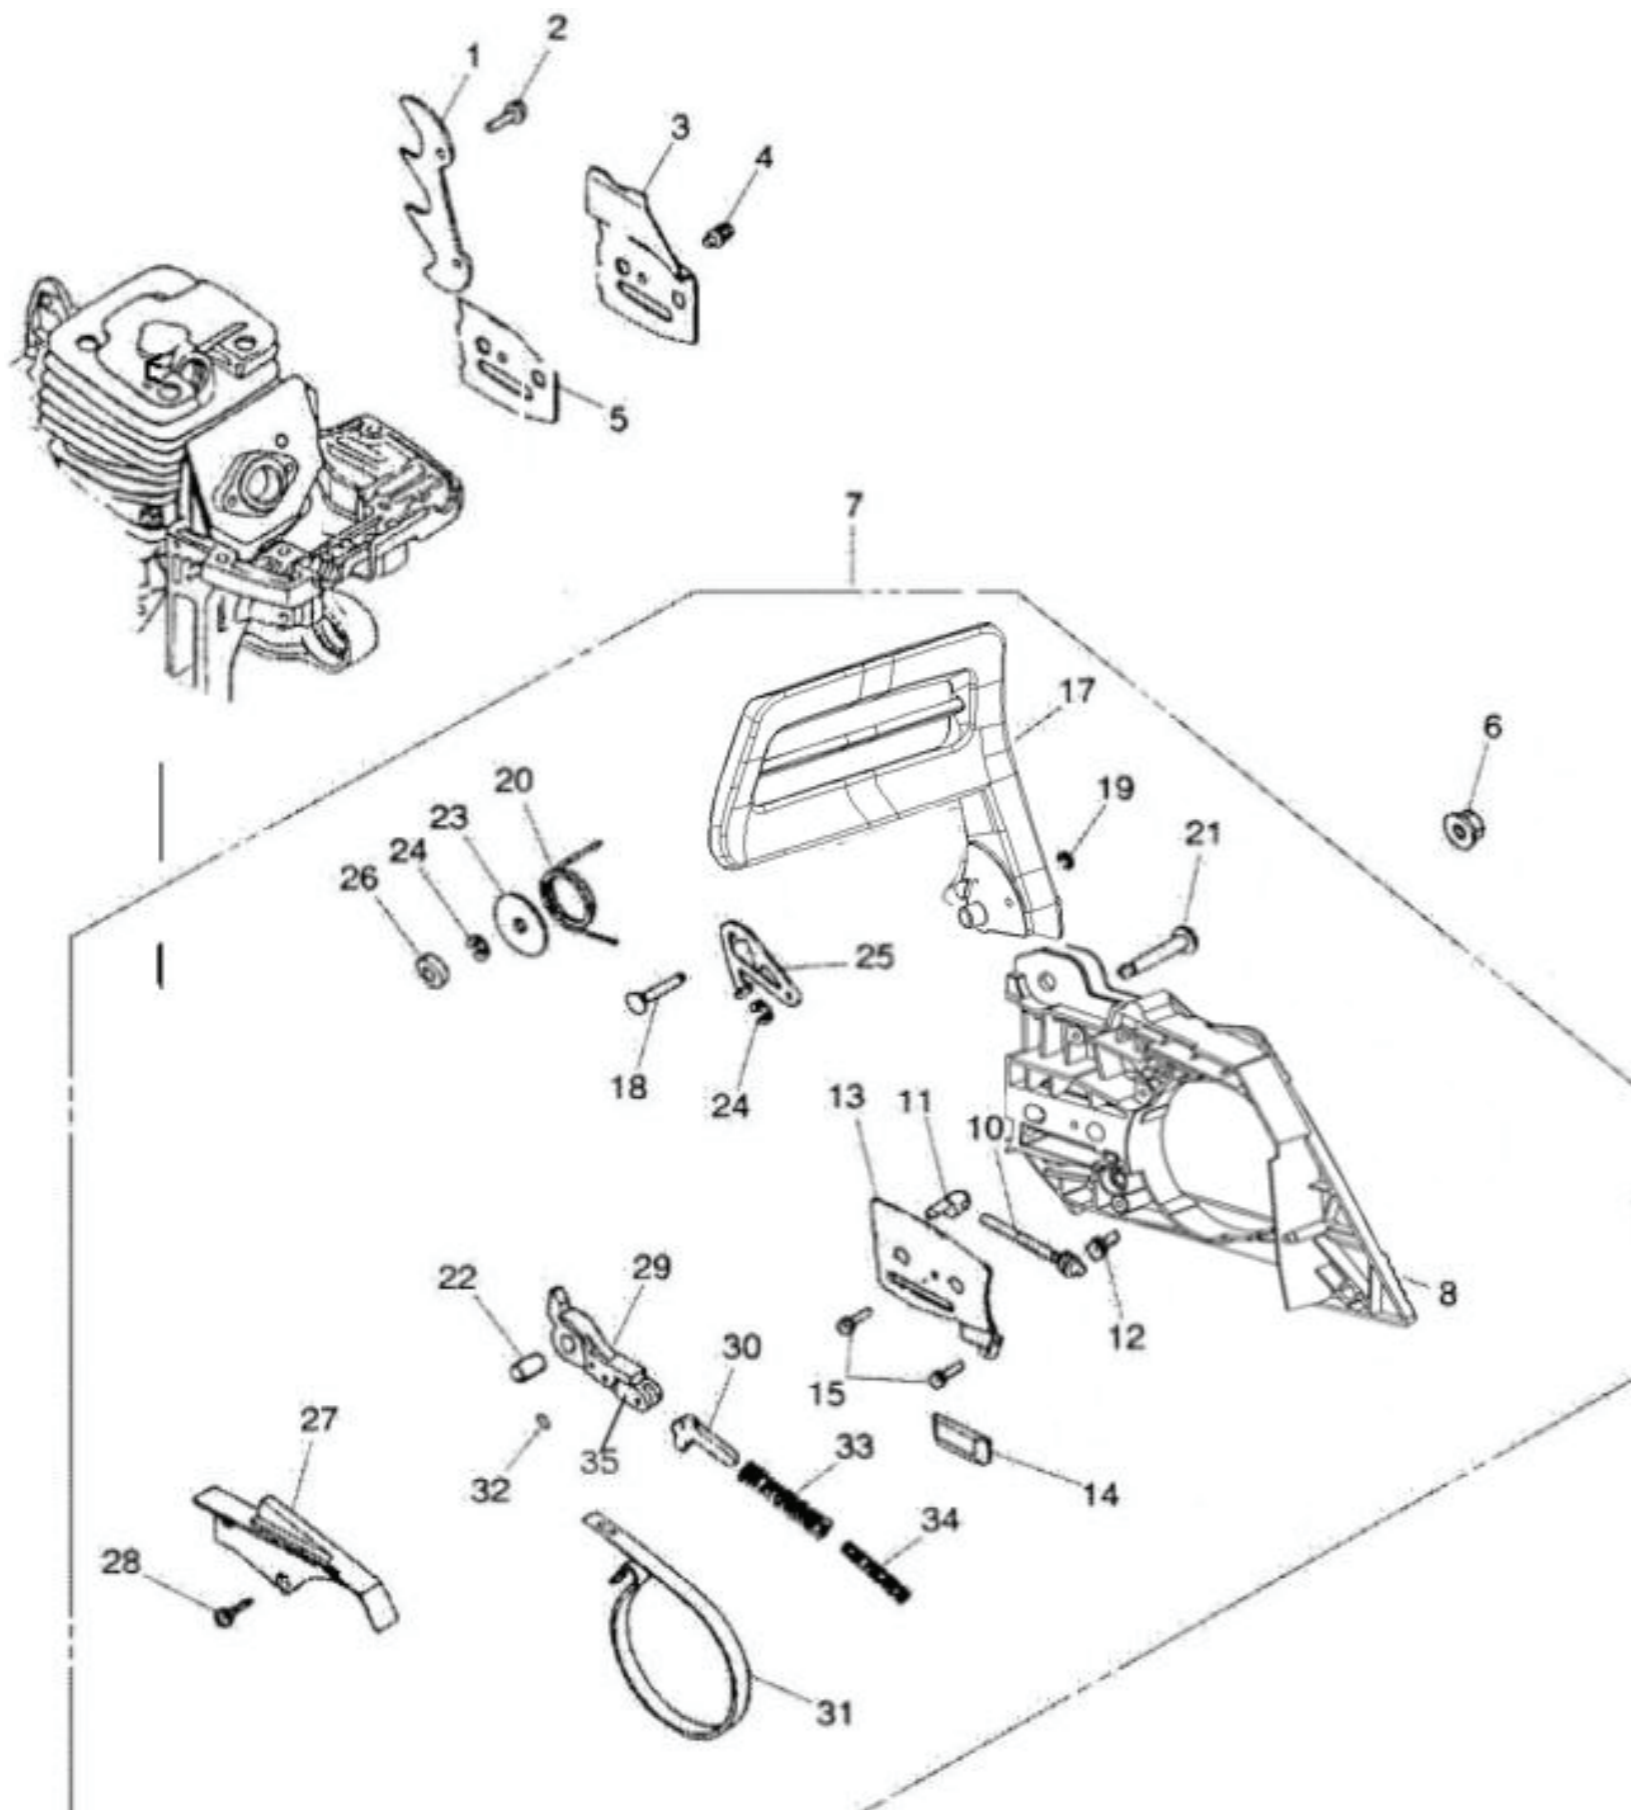

ПЕРЕЧЕНЬ ДЕТАЛЕЙ

№	Артикул	Наименование
1	05.02.0190	Bumper
2	01.01.0501	Screw M5*14
3	05.02.0210	Plate
4	01.01.0900	Screw M4*6
5	07.01.0340	Gasket
6	01.02.0100	Nut M8
7	04.94.4110	Chain cover assembly
8		Chain cover
10	01.07.0140	Screw
11	01.07.0160	Nut
12		Gear
13	05.02.0200	Plate
14	04.01.0470	Guide
15	01.03.0060	Screw ST4*8
16	03.01.0250	Protector
17	04.01.0920	Front guard
18	01.07.0130	Pin
19	01.04.0250	Ring □3
20	05.03.0180	Spring
21	01.07.0120	Pin
22	01.07.0110	Spacer
23	01.04.0100	Washer6*18*1.2
24	01.04.0270	Ring □4
25	05.02.0180	Plate
26	03.01.0240	Spacer
27	04.01.0910	Cover
28	01.03.0070	Screw ST4*10
29	01.05.0060	Pin 3*14
30	05.02.0170	Slide arm
31	05.02.0171	Brake band
32	01.05.0030	Pin □3*8
33	05.03.0160	Brake spring
34	05.03.0170	Return spring
35	04.01.0960	Brake lever complete