




ДЕТАЛИРОВКА

**БЕНЗИНОВЫЙ
ТРИММЕР**


Oleo-Mac BC 420 T

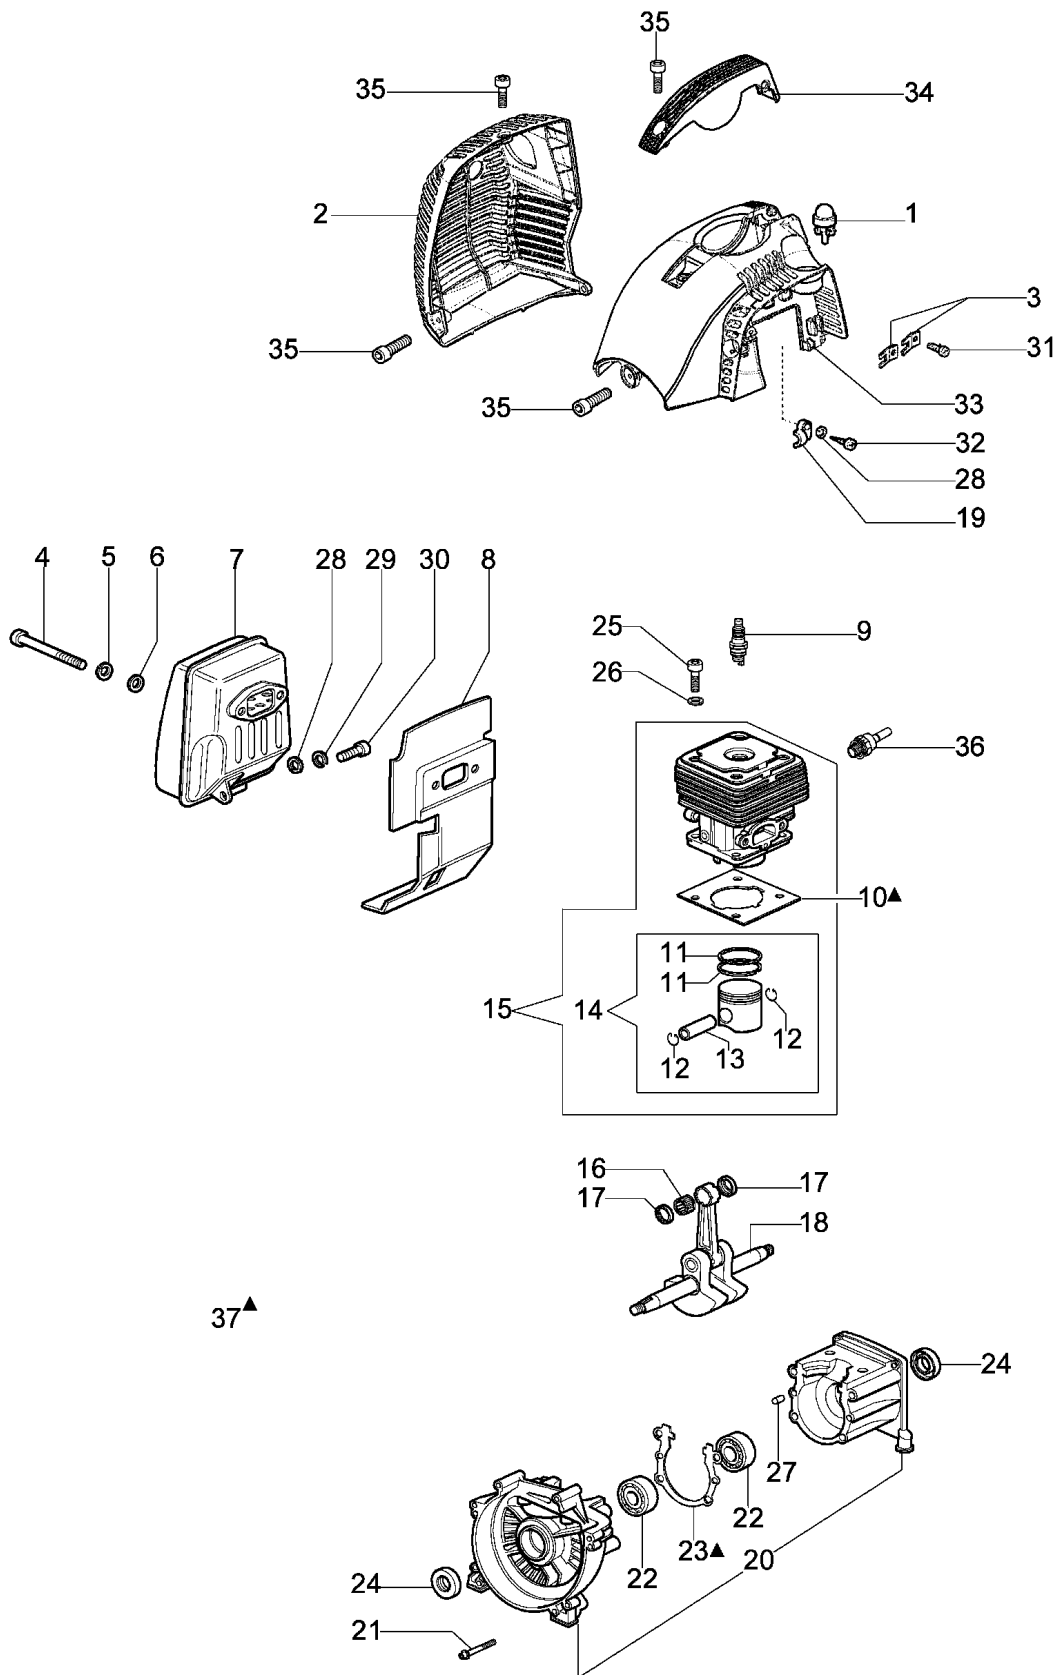

Drawing Engine

Reference	Qty	Item number	Description
1	1	50060012	Air purge
2	1	61250051R	Muffler cover
3	2	4191069B	Plate
4	2	3801069R	Screw
5	2	3819010	Washer
6	2	3916006	Washer
7	1	61250194R	Muffler
8	1	61210035R	Deflector
9	1	3055115	Spark plug
10	1	61200007AR	Gasket
11	2	004000015R	Piston ring d.40
12	2	004900061R	Ring
13	1	50110047R	Piston pin
14	1	50120034	Piston assy
15	1	61252035	Compl. cylinder
16	1	50110044R	Bearing
17	2	50110043R	Spacer
18	1	61200001R	Crankshaft
19	1	61200064R	Stopper
20	1	61200113R	Crankcase assy
21	4	3860096	Screw
22	2	094000006R	Bearing
23	1	61200006R	Gasket
24	2	094000099R	Seal ring
25	4	094000101R	Screw
26	4	3833073	Washer
27	2	3023008R	Plug
28	1	3916005	Washer
29	1	3819006	Washer
30	1	3801010R	Screw
31	2	3960030	Screw
32	1	3960069R	Screw
33	1	61250044R	Cylinder cover
34	1	61250046R	Plug cap
35	4	3960070	Screw
36	1	61250063AR	Decompressor
37	1	61202038R	Gasket set




Drawing Starter assy and clutch

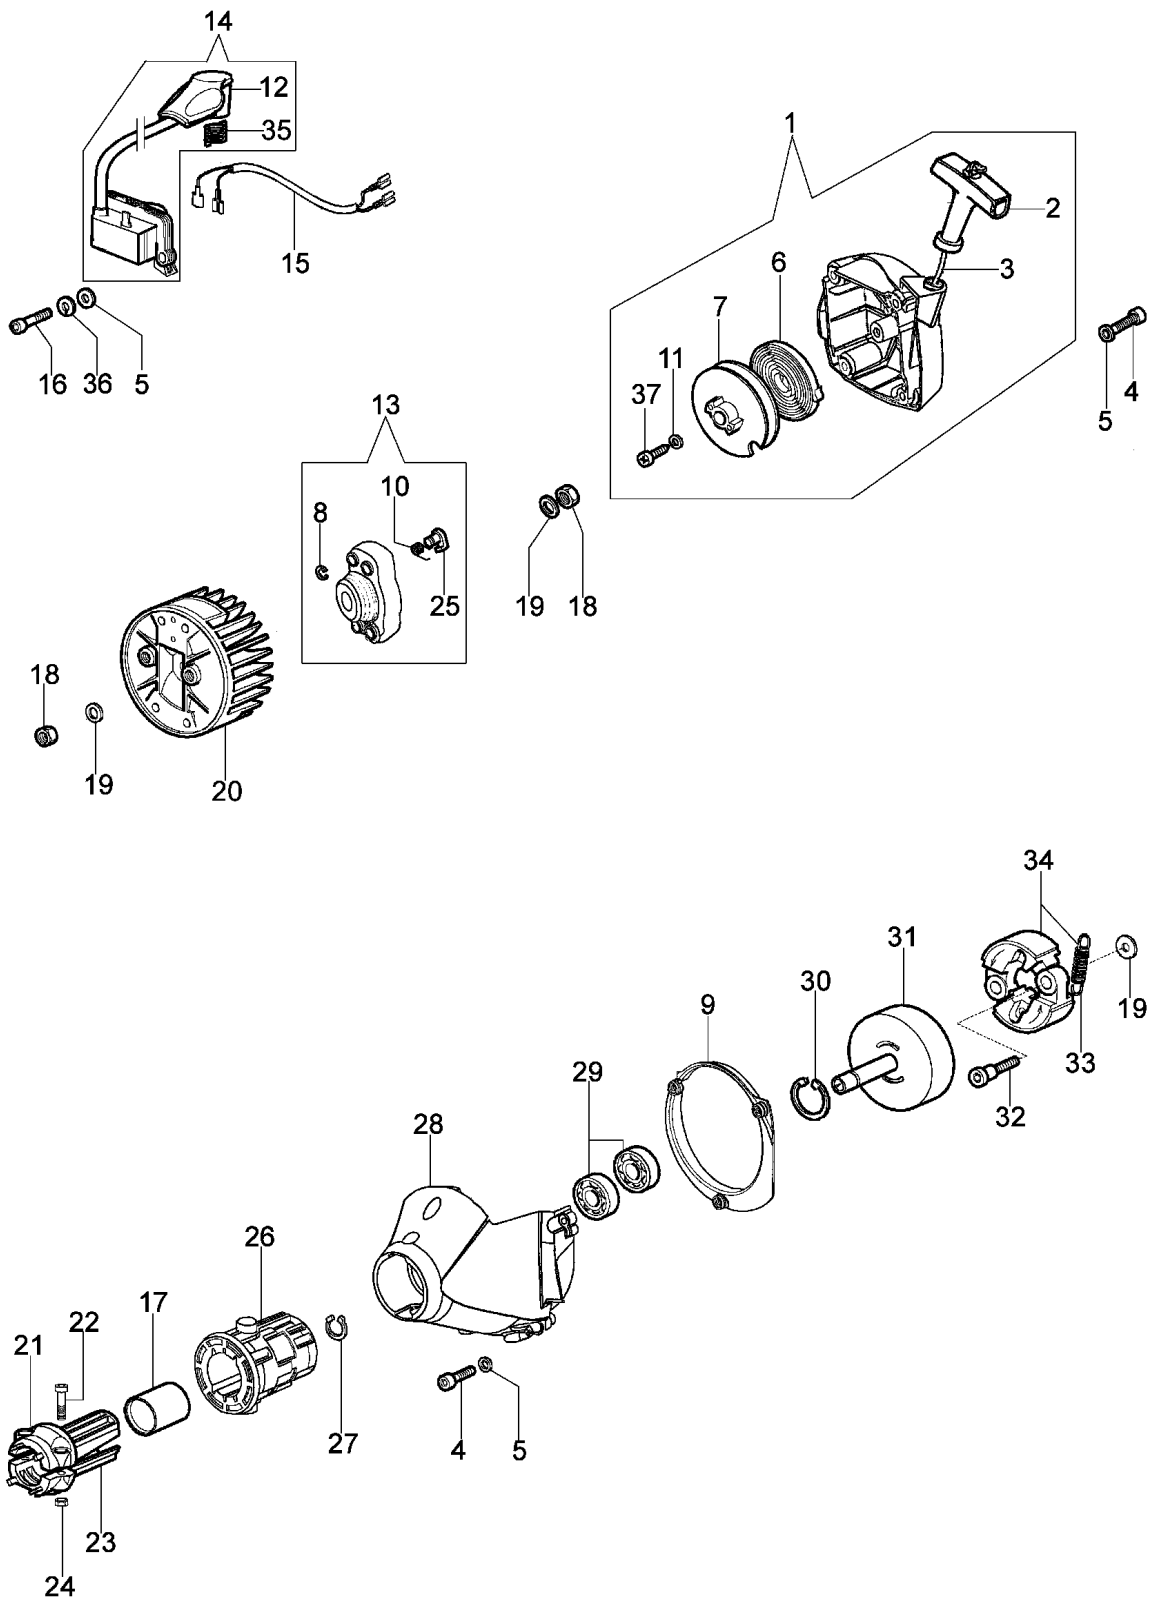

Drawing Starter assy and clutch

Reference	Qty	Item number	Description
1	1	61250201R	Starter assy
2	1	61200015R	Starter handle
3	1	4098073R	Starter rope
4	1	3960111	Screw
5	1	3916005	Washer
6	1	004000132R	Spring
7	1	4191018AR	Starter pulley
8	2	3024007	Ring
9	1	61250056R	Flange
10	2	4191017A	Spring
11	1	3918006	Washer
12	1	61200012R	Spark plug cap
13	1	61252002R	Clutch driver
14	1	61250197R	Ignition coil
15	1	61250047R	Cable
16	2	3801013R	Screw
17	1	4196038	Bushing
18	1	3912009	Nut
19	1	3818011A	Washer
20	1	61250014AR	Flywheel
21	1	61250019R	Clamp
22	2	3801016	Screw
23	1	61250020R	Clamp
24	1	3914003	Nut
25	2	4191016	Pawl
26	1	61250023R	Sleeve
27	1	3024015	Ring
28	1	61250018R	Cover
29	1	3035015R	Bearing
30	1	3025022	Ring
31	1	61250105R	Clutch drum
32	2	4191027ER	Pin
33	1	4191028R	Spring
34	1	4191153AR	Clutch
35	1	61200067R	Spring
36	2	3819006	Washer
37	1	3960099R	Screw


Drawing Fuel tank and air filter

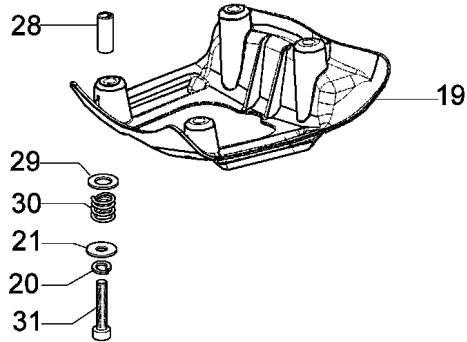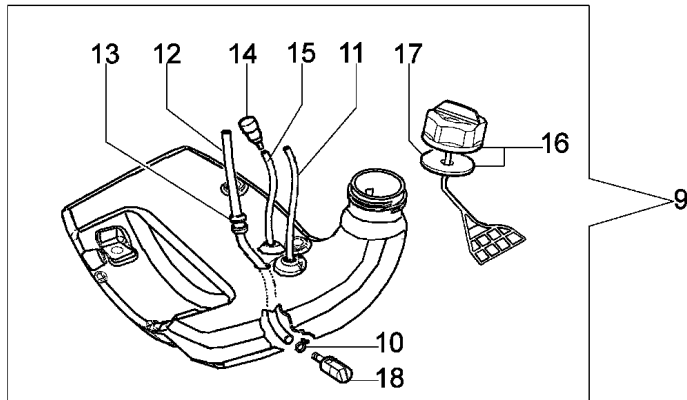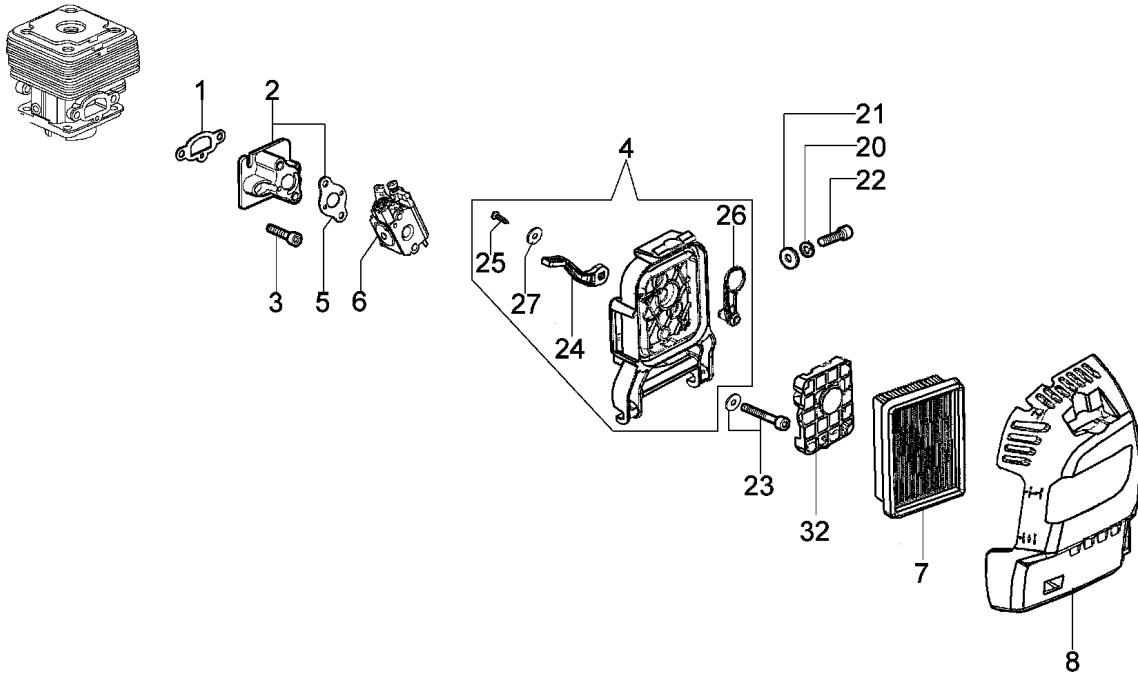

Drawing Fuel tank and air filter

Reference	Qty	Item number	Description
1	1	61200019AR	Gasket
2	1	61200198	Insulator
3	1	3801015	Screw
4	1	61250075R	Support
5	1	61200196R	Gasket
6	1	2318735R	Carburetor WT-870
7	1	61170016R	Air filter
8	1	61250206R	Filter cover
9	1	61250077R	Fuel tank
10	1	4098377	Band
11	1	61200092AR	Hose
12	1	4161271	Hose
13	1	4161211	Bush
14	1	61070011A	Breather valve
15	1	61200030AR	Hose
16	1	61252040R	Complete cap
17	1	61070006	Gasket
18	1	094600450R	Fuel filter
19	1	61250035R	Stand
20	5	3819006	Washer
21	5	3918005	Washer
22	1	3801013R	Screw
23	2	61052009B	Screw
24	1	61250027R	Lever
25	1	3960087	Screw
26	1	61250028BR	Shutter
27	1	3916004	Washer
28	4	61200128R	Spacer
29	4	3916008R	Washer
30	4	61200129R	Spring
31	4	3801016	Screw
32	1	61250026R	Guard


Drawing Transmission

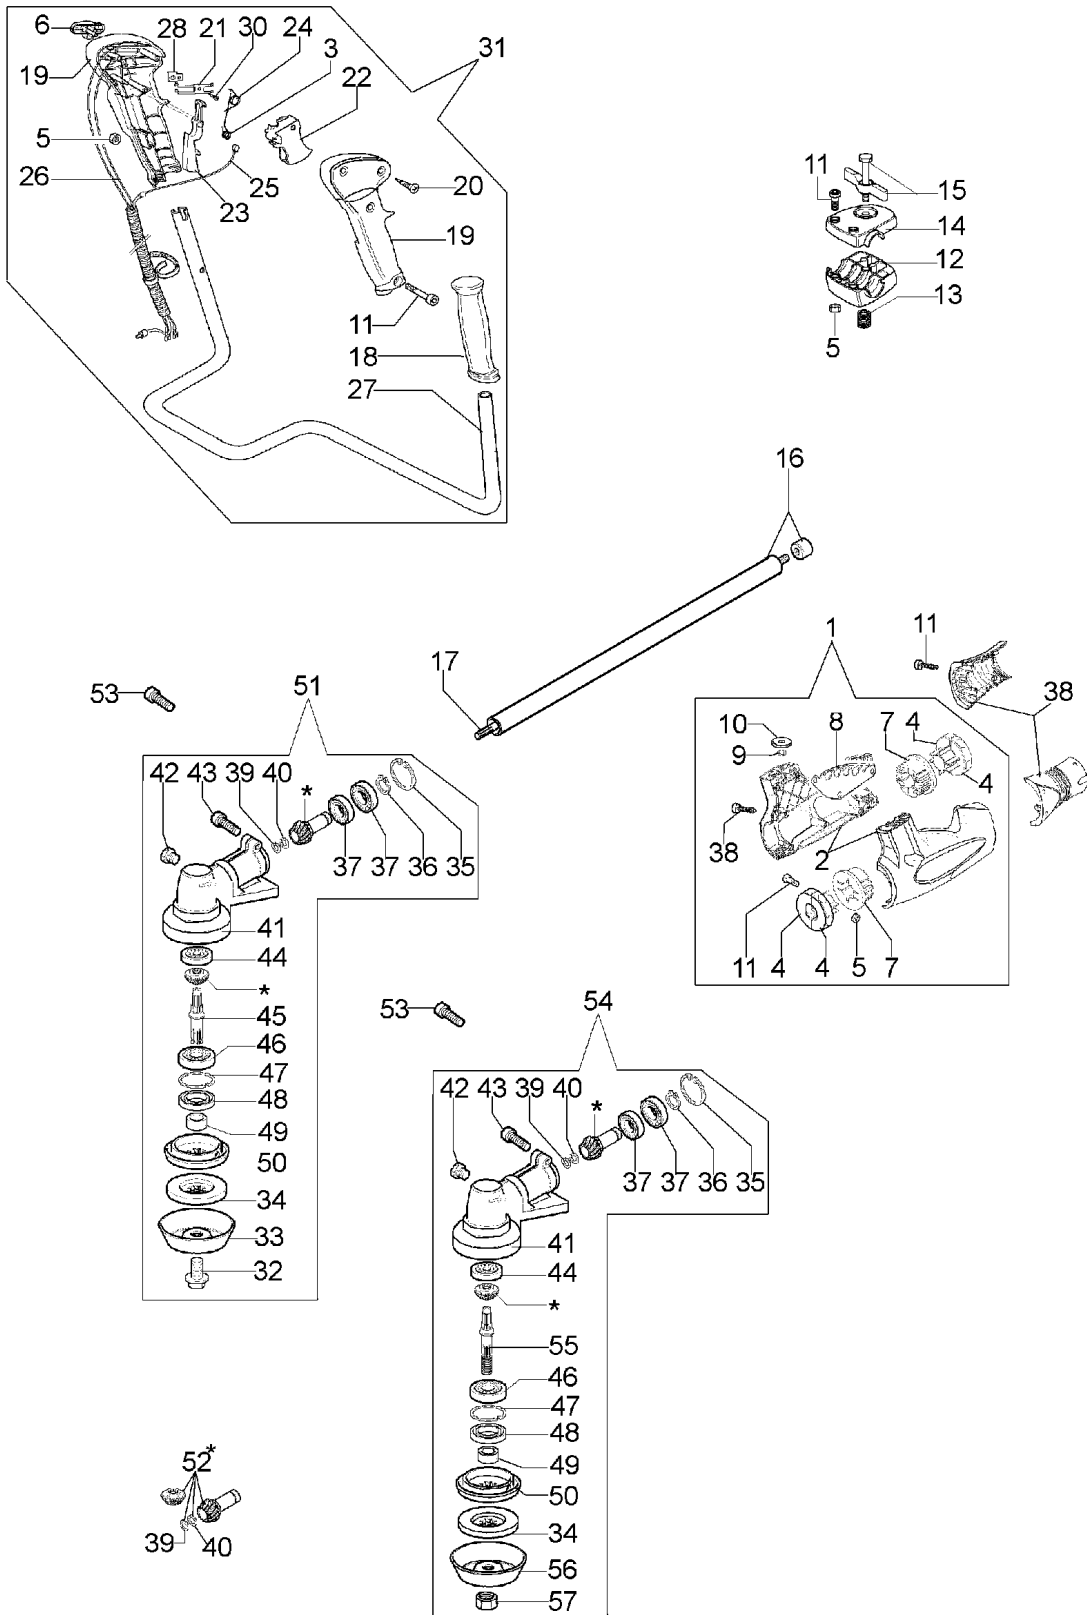

Drawing Transmission

Reference	Qty	Item number	Description
1	1	61252028R	Holder - complete
2	1	61252042	Compl. case
3	1	61170095	Spring
4	4	61040110R	Clamp
5	5	3914003	Nut
6	1	61170094	Slide control
7	1	61250181R	AV-mount
8	1	61250180R	Plate
9	1	3980011	Nut
10	1	66030012	Washer
11	1	3801016	Screw
12	1	61040136	Hub
13	1	61040044	Spring
14	1	61040135	Hub
15	1	61042030	Knob
16	1	61252049R	Tube Ø28
17	1	61250058R	Drive shaft
18	1	61040140R	Knob
19	1	61172043	Handle kit
20	1	3960067AR	Screw
21	1	61170093	Plate
22	1	61170091	Throttle lever
23	1	61170092	Lever
24	1	61170096	Spring
25	1	61250167R	Throttle cable
26	1	61250166R	Cable
27	1	61072037R	Handlebar
28	1	61170113	Plate
30	1	3960021	Screw
31	1	61250169R	Handle
32	1	61040074AR	Screw
33	1	4100456R	Guard
34	1	4179089R	Flange
35	1	3025019	Ring
36	1	3024010R	Ring
37	2	3035040R	Bearing
38	1	61252044	Compl. cover
39	1	3025009	Ring
40	1	4138311A	Ring
41	1	61040144R	Gear case
42	1	61040071R	Cap
43	1	3901016	Screw
44	1	3034218	Bearing
45	1	61040106A	Pin
46	1	3034012R	Bearing
47	1	3025022	Ring

Drawing Transmission

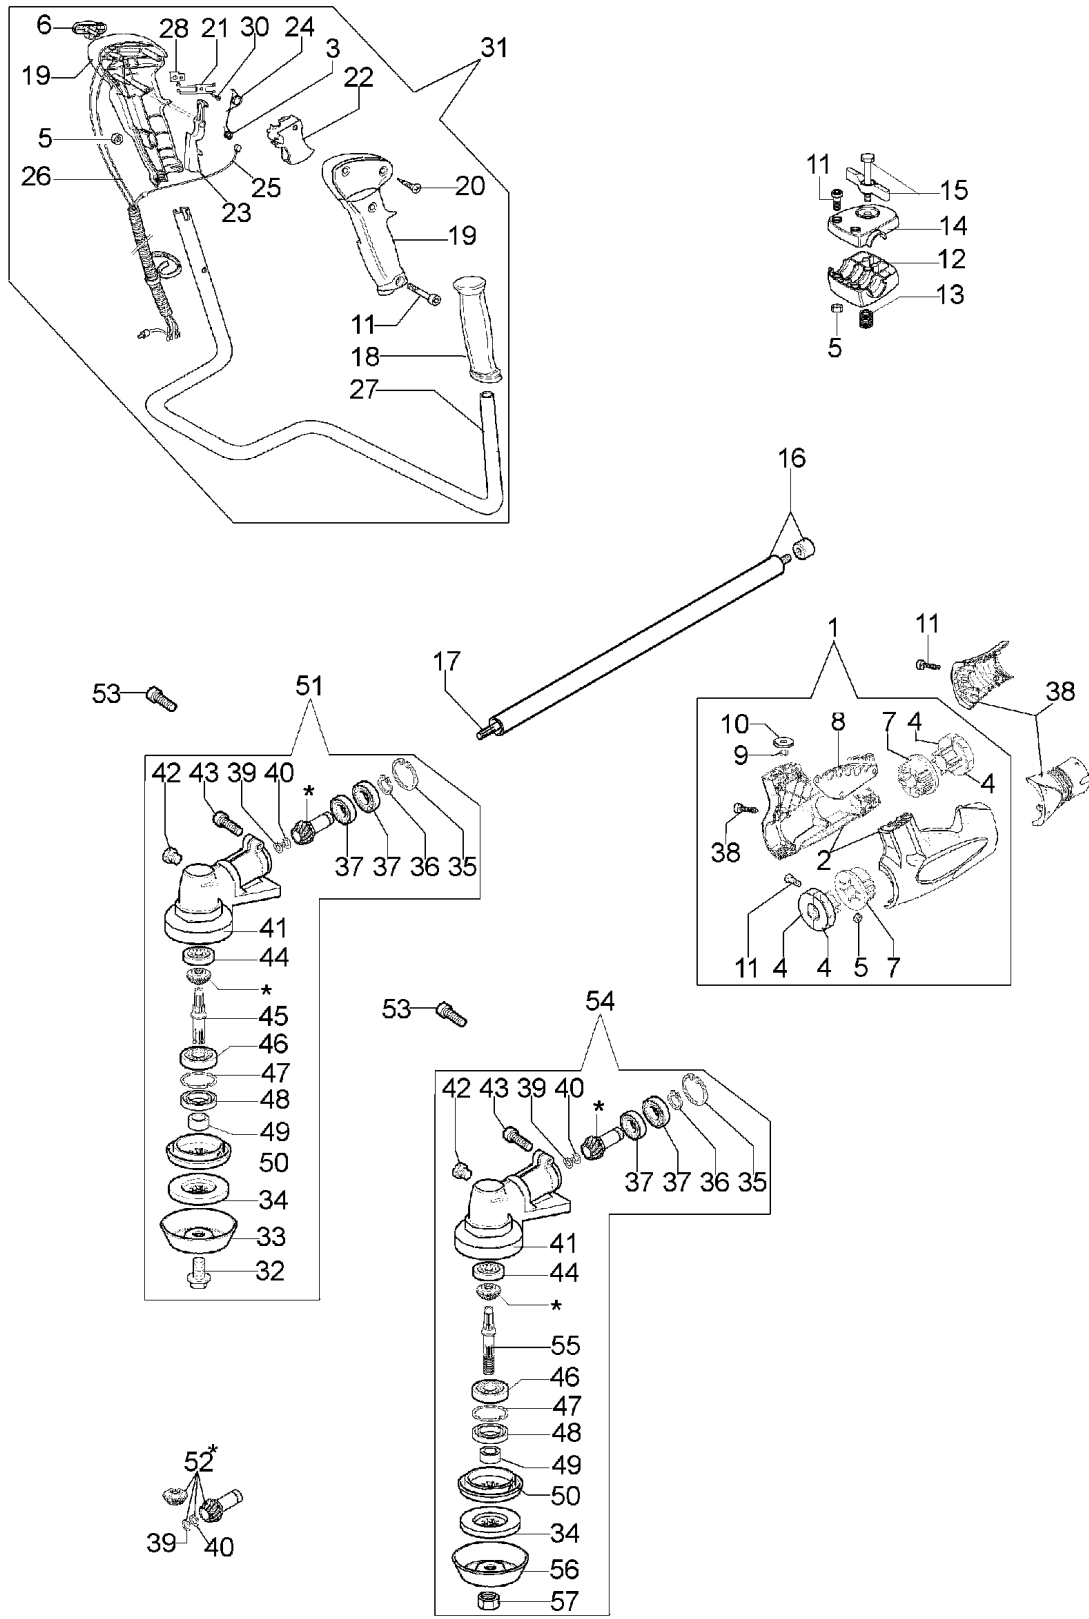


Drawing Transmission

Reference	Qty	Item number	Description
48	1	3050018R	Seal ring
49	1	61040066	Spacer
50	1	61040145R	Hub
51	1	61042032BR	Bevel gear Ø28
52	1	61040133	Bevel gear set
53	1	3901008	Screw
54	1	61250066R	Bevel gear Ø28
55	1	61250054R	Pin
56	1	61110074R	Guard
57	1	61110075R	Nut

Walbro mod. WT-870

compl. p.n. 2318735R






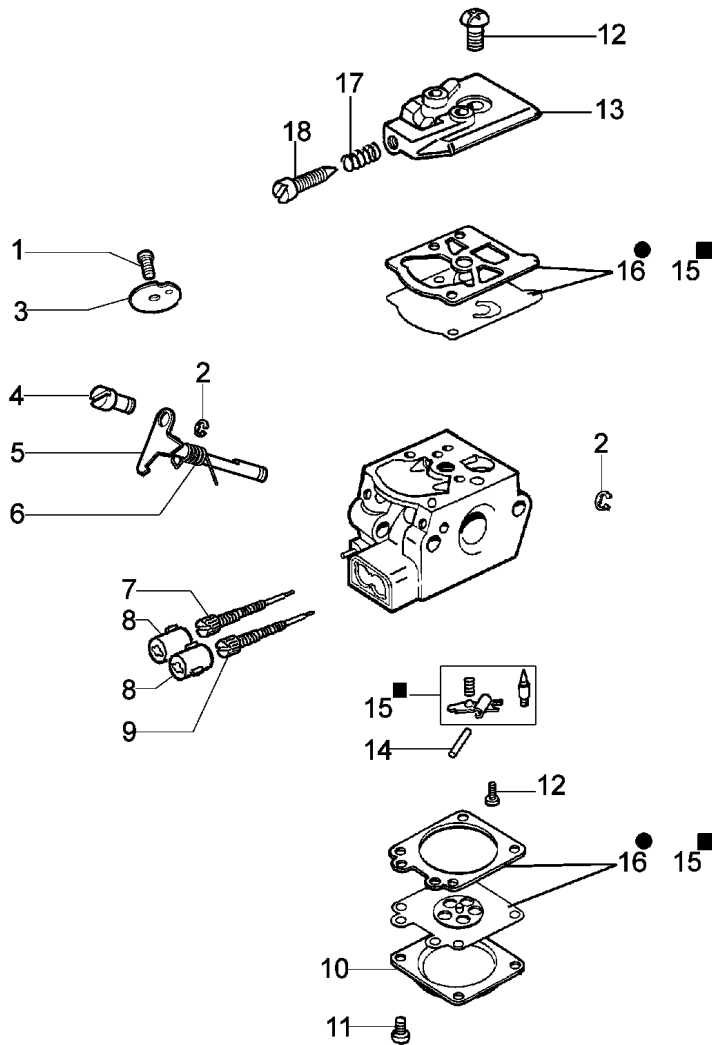


15 ■ KIT RIPARAZIONE
REPAIR KIT

16 ● KIT MEMBRANE & GUARNIZIONI
DIAPHRAGM & GASKET SET

Drawing Carburetor WT-870

Reference	Qty	Item number	Description
1	1	50010141	Screw
2	2	095000164	Ring
3	1	095000141	Shutter
4	1	2318211	Pin
5	1	2318786	Shaft
6	1	094600208	Spring
7	1	2318893	Adjust. screw
8	2	2318687	Cap
9	1	2318736	Screw L
10	1	2318191	Cover
11	4	035000162	Screw
12	1	003300202	Screw
13	1	50050107	Cover
14	1	003300201	Spindle
15	1	094600209	Repair kit
16	1	094600210	Kit guarn
17	1	094600148	Spring
18	1	074000240	Adjust.screw

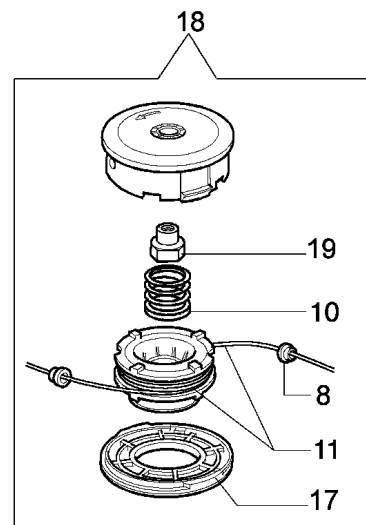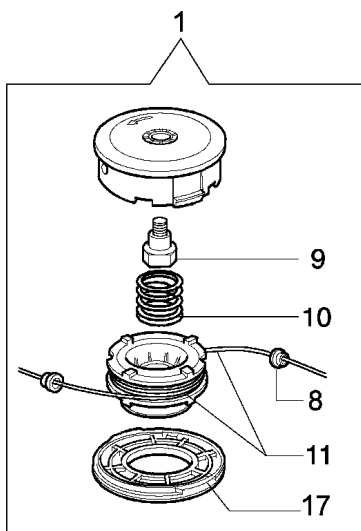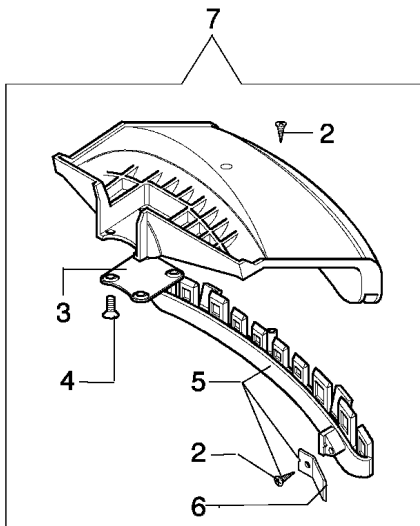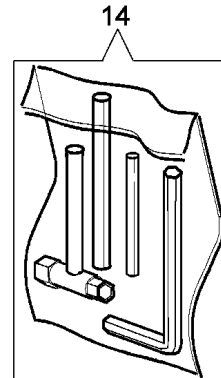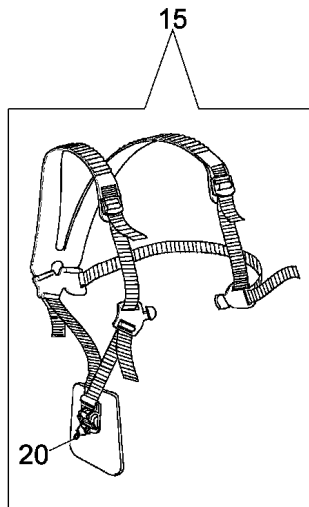

Drawing Accessories

Reference	Qty	Item number	Description
1	1	4199039AR	Compl. nylon head Ø3
2	1	3960040R	Screw
3	1	4174278	Plate
4	4	3802004CR	Screw
5	1	4174283A	Skirt w/blade
6	1	4174275R	Blade
7	1	61042011A	Guard assy
8	2	4199005A	Bushing
9	1	4199008B	Insert
10	1	4199004	Spring
11	1	4199031A	Nylon spool Ø3
12	1	4199026B	Cover
13	1	4095674R	Disk
14	1	61052031	Tool kit
15	1	63050018AR	Harness
17	1	4199046	Cover
18	1	61112059A	Compl. nylon head Ø3
19	1	61110076	Insert
20	1	63050016	Hooking spring